




# **Trijicon Q-LOC™ Technology**

Mount Installation Instructions



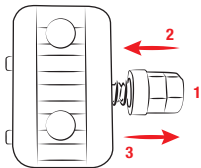

**1** Ensure the mounting knobs are loosened and able to be engaged.

**2** Depress knob(s) and place on rail.

**3** Release knob(s) to engage and secure rail placement.

» Spring loaded retention will guarantee 14-16 in/lbs of pressure on optic at all times before tightening.

**4** Hand tighten knobs or, if preferred, mounts can be tightened to 44-66 in/lbs.

