

# Trijicon DI<sup>™</sup> Night Sight Fiber Install & Retainer Replacement Instructions






## Cleaning Information

Normal cleaning will not degrade the sights. Avoid exposure to strong organic solvents when used in ultrasonic cleaning machines.

## Fiber Installation Instructions

1. Using T-10 Torque Key provided with your Trijicon DI Night Sight, unscrew the retainer ring located on the face of the front post by rotating it counterclockwise.
2. Insert the pre-cut fiber replacement segment into the sight so that it is sitting against the back shelf of the sight.
3. Re-install the threaded retainer ring by rotating it clockwise until it is hand-tight.

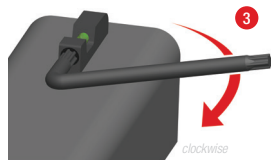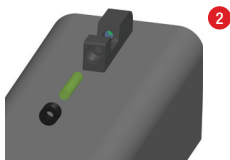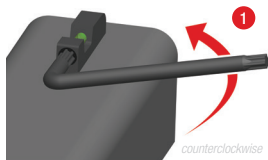

## Installation Tip

For best results, use Trijicon DI<sup>™</sup> replacement fibers. All fibers are finished using a proprietary technique to maximize day and nighttime brightness. Use of alternative fiber pieces could result in inferior performance of product.

## Available Accessories

### Standard Replacement Kit

AC50011 - Trijicon DI<sup>™</sup> Night Sight Green Fiber & Black Retainer Replacement Pack

### Available Fiber Replacement Packs

AC50010 - Trijicon DI<sup>™</sup> Night Sight Fiber Replacement Pack - Green

AC50016 - Trijicon DI<sup>™</sup> Night Sight Fiber Replacement Pack - Multicolor

### Available Retainer Replacement Packs

AC50012 - Trijicon DI<sup>™</sup> Night Sight Retainer Replacement Pack - White

AC50013 - Trijicon DI<sup>™</sup> Night Sight Retainer Replacement Pack - Orange

AC50014 - Trijicon DI<sup>™</sup> Night Sight Retainer Replacement Pack - Yellow

AC50015 - Trijicon DI<sup>™</sup> Night Sight Retainer Replacement Pack - Multicolor

Professional Installation Strongly Recommended  
for Mounting Sights to Firearm

U.S. patents may apply to this product. For details, visit [www.trijicon.com/patents](http://www.trijicon.com/patents).

©2020 Trijicon, Inc. | Wixom, Michigan USA | Phone: 1-800-338-0563 | [info@trijicon.com](mailto:info@trijicon.com) | PML6055-1 Rev(1) 1020

